

Erasing lost or stolen remotes

1. Locate learn code or program button on power head (electric operator hanging from the ceiling).
2. Press and hold learn code button for approximately 10 seconds or until small led light next to learn button goes out.


Python II (Learn button located under light cover)



Legacy (Located on back of the operator)



Phantom (Located under back light cover)

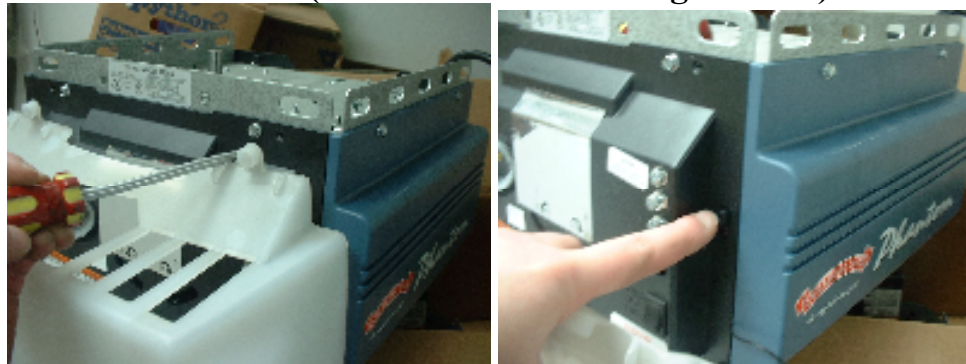

3. Receiver memory is erased and NO transmitters or remotes will work on the operator.
4. Reprogram remotes, keyless entry pads, homelink or any other electric devices wanted to open the door (See separate instructions)